



Yellow Footed Rock Wallaby Preservation Association Inc
PO Box 376, Campbelltown SA 5074

HISTORY WITH A FUTURE

Safety Instruction

Name	Instruction Number	Date	Version	Review Date
Work Ute Safety Instruction	YF-SI-01	22/01/2015	1	22/01/2018

Purpose

This instruction is to ensure safe use of the work ute located at The Bunkers Conservation Reserve in accordance with Work Health and Safety Act 2012 (SA)

All members and visitors while working at The Bunkers Conservation Reserve must comply with the Act as per the definition of a Worker.

NOTE: All persons that drive the Yellow Footed Rock Wallaby Ute must hold a current drivers licence.

Prestart

Before starting the ute check the following:

- Install the battery switch (green Knob) onto starting battery
- Diesel Fuel Level
- Engine Oil
- Engine Radiator Coolant
- Brake Fluid
- Tyre pressures of road tyres and spares (36 PSI min)
- **Disconnect Solar panel and store in building**

As the Ute is a Diesel it should never be run out of fuel otherwise the fuel system will have to be bled

1. Starting

- Turn on the ignition then depress the glow plug push button for no more than 5 seconds (large Black button on the dashboard on the right hand side of the steering column)
- Release the Black push button then turn the ignition key to the start position and the engine should start.

2. Driving

- The front hubs are left locked but the vehicle should be driven in two wheel drive for normal tracks
- When driving in more difficult terrain engage H4 this can be done on the move with the front hubs locked.
- If low range is required stop the vehicle and place in neutral with the clutch depressed move the 4 wheel drive lever to the L4 position
- The ute is old but reliable but should be treated with respect and not driven harshly.

3. Loading

- The ute is a three seater and should only ever carry 3 people in the cab
- No passengers are to be carried in the back tray of the ute.
- The loading carrying capacity of the tray is no more than 750kg
- All materials carried in the tray must be properly secured while vehicle is in motion.

4. Towing

- Vehicle is fitted with a 50mm tow ball for towing a trailer if required
- Ensure safety **chains are** secured when towing

5. Area of Use

- The ute is not registered and as such cannot leave the confines of The Bunkers Conservation Reserve.

Authorizing Officer _____ Sign _____ Date _____